



Mitel Model 6863i IP Phone Quick Reference Guide


Getting Started

Navigation/Select:

Use $\mathbf{V} \mathbf{A}$ to scroll through menus or messages on the screen.

Use ◀► to view different line/call appearances.

When editing entries, pressing the \blacktriangleleft key erases the character on the left and pressing the \blacktriangleright key sets the option. Alternatively, pressing the center \bigotimes key sets the option as well on specific screens.

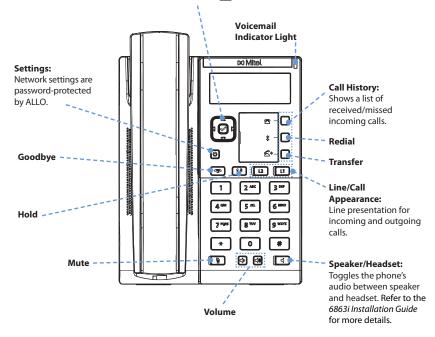



Basic Call Handling

Placing a Call

- 1. Lift the handset, press a **Line** key, or press the key.
- 2. Dial the number from the keypad and press the
 - Dial key.

Ending a Call

Place the handset on its cradle or press the 🕋 key.

Answering a Call

Lift the handset for handset operation or press the **Line** key or key for handsfree operation.

Ignoring a Call

Press the result when the phone is ringing to ignore the incoming call and (if configured) send the incoming call directly to voicemail.

Redialing

Press the to access a list of recently dialed numbers. Use the ▲ and ▼ navigation keys to scroll through the entries and press the key to redial the selected number. Press the key twice to call the last dialed number.

Muting

Press the 関 key to mute the handset, headset, or speakerphone.

Holding and Resuming

- 1. To place a call on hold, press the 🚺 key when connected to the call.
- 2. To resume the call, press the **Line** key corresponding to the line where the call is being held.



Advanced Call Handling

The 6863i IP phone provides simple and convenient methods for transferring calls.

Call Transferring

- 1. Ensure you are on active call with the party you wish to transfer.
- 2. Press the 🖌 key or Xfer softkey. This places the current call on hold.
- 3. Dial the number of the party to whom you want to transfer the call.
- 4. Press the key or **Xfer** softkey before the receiving party answers to perform a blind transfer.

OR

Wait until the party has answered and then press the key or **Xfer** softkey to complete the transfer.

Customization

Adjusting the Volume

Press the 4 3 keys during a call to adjust the volume of the audio device (i.e. handset, headset, or speakerphone). Pressing these keys when the phone is idle adjusts the ringer volume.

Other Features

Using Call History

- 1. Press the 🕿 key to access Call History.
- 2. Scroll through the list by pressing the \blacktriangle and \checkmark navigation keys.
- 3. Press the \checkmark key to place a call to the respective entry.

